

ArtHexis Control Mode on RPi 4B

1. Wire the Raspberry Pi to the LCD as shown.
2. Connect 5V (pin 2) to LCD VCC.
3. Connect GND (pin 6) to LCD GND.
4. Connect GPIO2 SDA (pin 3) to LCD SDA.
5. Connect GPIO3 SCL (pin 5) to LCD SCL.

Run arthexis with --control to enable control mode.

